




Control switch - desk-panel model

Robust control switch suited for both horizontally sliding (left/right) and vertically sliding (up/down) windows. The control switch is screwed in under the counter or desk, making for a discrete installation which will not clutter the work surface. The buttons are easily pressed and have a distinct feeling when pressed. When pressed, the buttons make a light clicking sound.



DESIGN

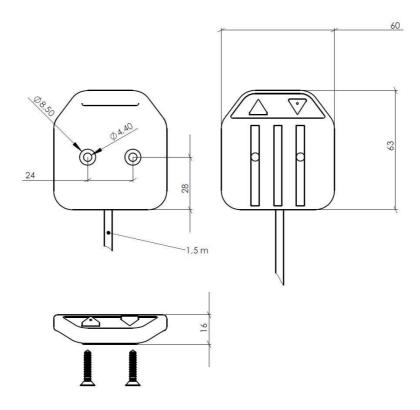

TECHNICAL INFORMATION

NAME D3.DP1

DESCRIPTION

Control switch – desk-panel model

CONTROL SYSTEM

FUNCTION

Manoeuvring left/right or up/down

MATERIAL

Plastic casing with soft rubber pushbuttons

COLOUR Casing in anthracite grey, pushbuttons in agate grey

Design and material subject to change without prior notice



